



Operating instructions [ENG](#)



Operating instructions [SLO](#)

Basic

12-30Vdc, built-in receiver for using up-to 8 wireless sensors and wireless keyfob transmitters, 8 digital

Advance

12-30Vdc, built-in receiver for using up-to 8 wireless sensors and wireless keyfob transmitters, 8 digital

Reference

12-30Vdc, built-in receiver for using up-to 8 wireless sensors and wireless keyfob transmitters, 8 digital