



Operating instructions [ENG](#)



Operating instructions [SLO](#)

### **Basic**

12-30Vdc, built-in receiver for using up-to 8 wireless sensors and wireless keyfob transmitters, 8 digital

### **Advance**

12-30Vdc, built-in receiver for using up-to 8 wireless sensors and wireless keyfob transmitters, 8 digital

### **Reference**

12-30Vdc, built-in receiver for using up-to 8 wireless sensors and wireless keyfob transmitters, 8 digital